

## Cleaning the One Touch Cappuccino-Frother



In addition to using the cappuccino cleaning system, you should also remove the One Touch Cappuccino-Frother regularly and rinse it under running water.

- Remove the One Touch Cappuccino-Frother from the IMPRESSA X5
- Dismantle frother
- Rinse all parts of the frother under running water
- Reassemble the frother and reattach to machine

**IMPRESSA**  
*if you love coffee*


08/04



**Coffee in its most perfect  
form – IMPRESSA X5  
Getting started**

## Using the machine for the first time



- Switch on mains switch
- Press operating button 
- Fill water tank
- Fill bean container





- Turn Rotary Switch until desired language appears
- Press Rotary Switch to confirm selection




- Turn Rotary Switch to set time in hours
- Press Rotary Switch to confirm hours
- Turn Rotary Switch to set time in minutes
- Press Rotary Switch to confirm minutes



- Maintenance key  lights up
- Place one container each under the hot water dispenser and One Touch Cappuccino-Frother
- Press maintenance key 
- System fills automatically



- Place container under coffee dispenser
- Press maintenance key 
- The pipes are rinsed with fresh water

The machine is now ready for use.

**After being used for the first time, the machine must be left switched on for at least 24 hours.**

## Inserting the filter (when using machine for first time)




- Press Rotary Switch until **FILTER NO** appears
- Press Rotary Switch again to enter this point of the program
- Turn Rotary Switch until **FILTER YES** appears on the display
- Press Rotary Switch to confirm setting



- Remove water tank and empty




- Open cartridge holder
- Fix extension piece in position on top of CLARIS plus filter cartridge
- Use gentle pressure to insert filter cartridge in water tank

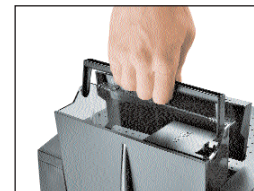

- Close cartridge holder (it clicks audibly into place)
- Fill water tank



- Position container (at least ½ litre) under One Touch Cappuccino-Frother
- Press maintenance key 


Filter rinse stops automatically

The machine is ready for use



## Cleaning (approx. 15 minutes)




- Press maintenance key 
- Display text: **TRAY / GROUNDS EMPTY**



- Empty drip tray and coffee grounds container and reinsert
- Place one container (approx. ½ litre) each under the height-adjustable coffee dispenser and the One Touch Cappuccino-Frother



- Press maintenance key 
- An acoustic signal is heard
- Display text: **ADD TABLET**



- Open cover to filler funnel for pre-ground coffee powder
- Drop in JURA cleaning tablet and close cover




- Press maintenance key 
- An acoustic signal is heard
- Empty drip tray and grounds container and reinsert in machine

The machine is ready for use

## Descaling (approx. 50 minutes)




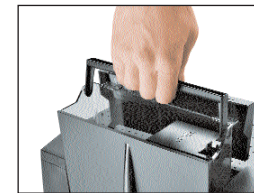
- Press maintenance key 
- Display text: **TRAY / GROUNDS EMPTY**
- Empty drip tray and coffee grounds container and reinsert
- Display text: **SOLVENT IN TANK - PRESS BUTTON**
- Remove water tank and empty



- Completely dissolve contents of one blister (3 tablets) in 600 ml of water.
- Pour solution into water tank
- Reinsert water tank




- Remove the One Touch Cappuccino-Frother
- Place one container each under the coffee dispenser and the connector of the One Touch Cappuccino-Frother
- Press maintenance key 
- An acoustic signal is heard
- Display text: **TRAY / GROUNDS EMPTY**
- Empty drip tray and coffee grounds container and reinsert



- Display text: **WATER TANK / FILL**
- Rinse water tank thoroughly, fill with fresh, cold tap water and reinsert




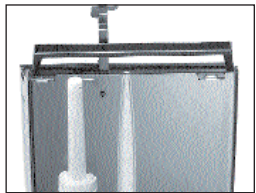
- Replace the One Touch Cappuccino-Frother
  - Place one container each under the height-adjustable hot water dispenser and the One Touch Cappuccino-Frother
  - Press maintenance key 
  - When the system is heated through, a rinse cycle is automatically activated and an acoustic signal is heard
  - Display text: **TRAY / GROUNDS EMPTY**
  - Empty drip tray and grounds container and reinsert in machine
- The machine is ready for use

## Changing the filter

After 50 litres of water or every two months, the filter is no longer effective. A reminder to change the filter appears on the display.




- Maintenance key lights up
- Press maintenance key 
- Remove water tank and empty



- Open cartridge holder
- Fix extension piece in position on top of new CLARIS plus filter cartridge
- Use gentle pressure to insert filter cartridge in water tank
- Close cartridge holder (it clicks audibly into place)
- Fill water tank



- Position container (at least ½ litre) under the One Touch Cappuccino-Frother
- Press maintenance key 

Filter rinse stops automatically  
The machine is ready for use


## Cleaning the cappuccino system

If you make cappuccino or heat milk, you should clean the cappuccino system daily.




- Press Rotary Switch until **FILTER NO** or **FILTER YES** appears
- Turn Rotary Switch until **RINSE** appears
- Press Rotary Switch to start the maintenance menu
- Turn Rotary Switch until **CAPPUCCINO CLEANING** appears on the display



- Position container (at least ½ litre) under the One Touch Cappuccino-Frother and press Rotary Switch
- Fill second container with ¼ litre of water
- Add one cupful of cappuccino cleaner
- Dip milk suction tube in second container  
**The selection lever must not be in the «Steam» position!**
- Press maintenance key 



- Display text: **WATER FOR CAPPUCCINO**
- Fill second container with fresh water
- Dip milk suction tube into this container
- Press maintenance key 

The Cappuccino cleaning system stops automatically