

FRACINO

SERVICES REQUIRED FOR INSTALLATION OF FRACINO CAPPUCCINO COFFEE MACHINES AND ASSOCIATED EQUIPMENT.

ALL MACHINES REQUIRE A MAINS WATER & POWER SUPPLY AS SPECIFIED BELOW. IT IS HIGHLY RECOMMENDED THAT A MAINS WASTE OUTLET IS PROVIDED BUT A BUCKET IS SUFFICIENT IF NOT AVAILABLE. ALL SERVICES MUST BE IN PLACE PRIOR TO INSTALLATION. ALL CALLS TO UNPREPARED SITES ARE FULLY CHARGEABLE.

MAINS WATER: 15mm COLD WATER SUPPLY WITH 3/4" STANDARD WASHING MACHINE STOP COCK.

MAINS WASTE: 1 1/2" (MINIMUM DIAMETER) STAND PIPE FOR FLEXI HOSE.

WATER & WASTE CONNECTIONS TO BE DIRECTLY BENEATH THE LOCATION OF THE MACHINE (WITHIN ONE METRE).

POWER SUPPLY: *COFFEE MACHINES*

STANDARD POWER RATINGS

1 GROUP (2.7kw) 13 AMP
2 GROUP (4.0kw) 20 AMP SINGLE PHASE
3 GROUP (7.5kw) 30 AMP SINGLE PHASE
4 GROUP (7.5kw) 30 AMP SINGLE OR THREE PHASE*

ALTERNATIVE ELEMENT/POWER RATINGS

(MUST BE SPECIFIED ON ORIGINAL ORDER IF ONE OF BELOW

REQUIRED).

2 GROUP (2.85kw) 13 AMP
2 GROUP (7.5kw) 30 AMP SINGLE PHASE
3 GROUP (9.0kw) 45 AMP SINGLE OR THREE PHASE*
4 GROUP (9.0kw) 45 AMP SINGLE OR THREE PHASE*

**MUST BE SPECIFIED ON ORDERING IF 3 PHASE REQUIRED.*

POWER CONNECTION TO BE DIRECTLY BEHIND THE LOCATION OF THE MACHINE

GRINDERS

ALL MODELS 13 AMP

SOCKET TO BE LOCATED ON THE SAME SIDE OF THE COFFEE MACHINE THAT THE GRINDER WILL STAND. (RECOMMEND RIGHT HAND SIDE).